

*IMPORTANT GUIDELINES FOR INSTALLATION—STOP & READ BEFORE INSTALLING

Install According To Instructions Only:

OOEWDOODWLRPWFRIRUPWRWUDORU;DEUWLDWOODWLRWUEWLRRLRUGUIRUWUDORU;D
 RW*DUWWRDSSO □ IWDOOERULLEWDOOGLDPDURWUWDWDWUFRPPGGEUDORU □
 :DLWLGRDWWROULNRIWLWDOOUDGWUDORU;DRW*DUWWSURWEWLRGRRWDSO □

Check Shipment for Accuracy:

OOODEODDOEEFRUDEFEKUDFEWLDWDOOUWRKUWDW W LSPW LDFLYGDRUGIG □
 JIDGLEUSDEFIRKXGKUDORKUIDRKOGEFRWDFWGI □

Check Product for Defects:

SSRDFYLRKUPKUDOSURPSWOFERUSURGKEFWGHWJIRGHWLVLGWEIRULWDOODWLRSUREGLW □
 WLDWDOODWLRJIDGHWLVLGWLDWDSRLWRWLDWDOODWLRRIKUWUPDWULDORKOGEDESSOLGDKGKUDOI □
 RKUIDRKOGEFRWDFWGIWDOORKUPKUDOLWLRKURIPRYLDGKUROOLIPRPSDEFILRUUROOKS □
 DGSODEFEDELRLULLDOSDEFDLKWLOIDGWRLWDOOJIDLOKUWRGRRPDEFKWDDOFRYULWREKUOI □

DOOEGUSDUUDWLR □

Wall Surface: OODLUIDFPWEPRRW before proceeding.

The wall surface must also be clean, dry, undamaged, free of mold, mildew, grease or stains as well as structurally sound. Loose paint or other wall coverings must be removed. Nail heads, nicks, gouges, and other surface imperfections should be filled, sanded smooth and sealed. On new walls, drywall joints should be taped, mudded and sanded smooth. Turn off power and remove all faceplates and socket covers.

Wall Paint: URSUUIDEFISUSDUDWLR □ NWRWWLUDWUOW □

*ORUIDFROGEDGGWRGOOWUIDFDGGWUPRG □
 LWDGUEFORWRUDDSSOLEFDWLRRI SURILRDODGW □ latex paint or primer should be applied 72 hours prior to installation.

Measure Carefully: RUDEFIODLMRELWLWLDOWDW □

RUDOORULEWUDLW □ Measure the width of your first panel and mark a straight vertical plumb line on your wall to line up the first panel. If you are starting at a corner, mark your plumb line half an inch less than the width of your panel, this way your wallpaper will overlap on the adjoining wall by half an inch and can be trimmed off. If the mural is smaller than the total wall space, mark out the dimensions lightly in pencil on the wall using a level and tape measure to create a straight center line and make sure that the area is level. Use only a lead pencil for marking walls.


Temperature: RRWLWDOODOOERULODWPSUDWUDER □

LPDLWDLGEBRWUDRILWDOODWLRDGWRUDIRUDWODW □
 RUSULRUWRLWDOODWLR □

Angled Ceiling: Measure the difference in height between your starting point and the highest point on your wall. Compensate for the difference by leaving that amount of extra material at the top of the first panel (which you will trim off at the end). If the width of your walls is out of plumb, compensate similarly.

Out-of-Plumb Walls:

6DKUWGLIIFELLW □
 EWRKUWDUWLSRLWDGW □ □
 LWSRLWRRKUODOO □ RPSDW □ □
 TRUWGLIIFEDYLDWDPKRW □ □
 RIWUPDWULDODWWRSRWUWUW □
 SDLFRKLDOWULPRIDWUW □
 GIWLGWRIRKUDOOCLKWRRI □
 SOKPEFRPSDWLPLODUO □

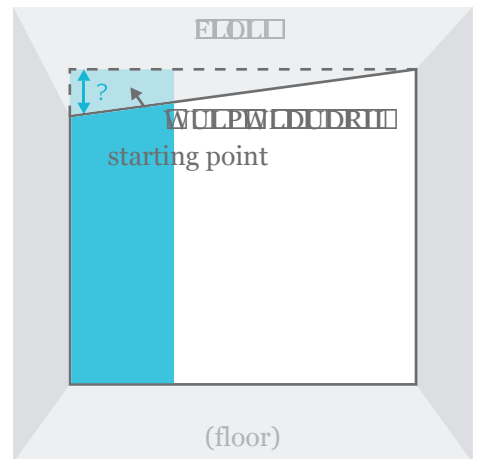

Tools You'll Need:

- Tape Measure
- Level
- Ladder
- Drop Cloth
- Knife or snap-off blade
- Pencil
- Spray bottle
- Sponge and bucket of clean water
- Plastic smoothing tool
- A helping hand, if needed

Step 1 – Review Panels: Arrange the panels of the mural in front of the wall where they will be installed in the proper order. All murals more than (1) panel will be numbered, in order, on the front bottom left corner. This marking is small and faint so that if not trimmed after installing, it will not be readily apparent.

Step 2 – Activate Adhesive:

Activate and install one panel at a time. Lay mural printed side down on top of a drop cloth. Using a wallpaper hand sprayer or household spray bottle, activate the paste by spraying clean water onto the pasted surface. Thoroughly wet the entire panel until saturated, paying close attention to the edges. Fold/book each end toward the middle, pasted sides together, aligning the edges carefully so they do not dry out. Allow to “relax” for two to five minutes. This will allow the adhesive to activate, ensure a firm bond as well as prevent your seams from separating.

Note: Do not crease booked material. Do not submerge paper in water.

Step 3 – Hanging Your Wallpaper:

1. Install “Panel #1” by carrying your booked panel to your wall. Unfold the top portion and smooth onto the wall, ensuring that it is straight with your plumb line. Leave up to half an inch overage for trimming along the ceiling line.
2. Carefully smooth out bubbles and creases from the middle of the panel outward. If necessary, re-spray with water around the edges.
3. Slide the wallpaper panel into position, using the palm of your hands and align with your vertical plumb line. Avoid pulling on the edges. Carefully smooth out bubbles and creases from the middle of the panel outward.
4. Unfold the remainder of the panel and carefully smooth out any remaining bubbles and creases.
5. Overlap the second panel over the first panel by approximately two inches, matching up the image. Apply any additional panels in the same method. Carefully smooth out all bubbles as you go. Pre-pasted Wallpaper Murals are printed with a two inch overlap. DO NOT cut the overlap. Cutting the overlap may result in seams separating.
6. Trim the excess waste using a knife with a fresh blade. Make long cuts, without lifting the blade.
7. Wash off any excess paste.
8. Step back and enjoy!

PLEASE NOTE: Every mural is printed with a two inch overlap. Do not butt panels. Do not cut overlap.